



AT-HS6

User Manual / Headshell



audio-technica

 
Thank you for purchasing this Audio-Technica product. Before using the product, read through this user manual to ensure that you will use the product correctly. Please keep this manual for future reference.

Safety precautions


- Keep the product out of the reach of small children to avoid accidental ingestion of screws, nuts and washers, or damage to product.
- Do not use the product for any purpose other than to mount a phono cartridge.
- Do not put the product in a location where it is exposed to direct sunlight, near heating devices, or in places with high temperatures, high humidity, or high concentrations of dust.
- Do not attempt to disassemble or modify the product.
- Do not subject the product to strong impact.

Name of each part

Side view




Top view

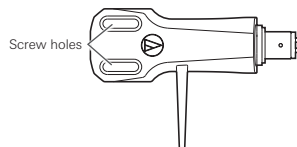

Specifications


Material	: Aluminum
Weight	: Approx. 9 g (0.32 oz) (including lead wire)
Accessories	: Cartridge installation slotted screw (10.0 mm × 2 and 8.0 mm × 2), Nut x 2, Plastic washer x 2

Specifications are subject to change without notice due to improvements.

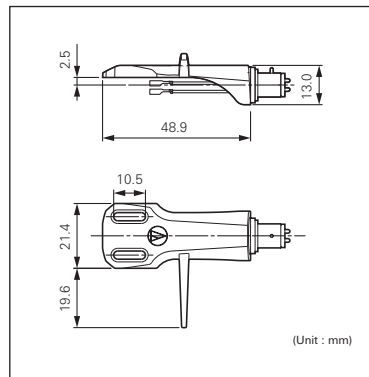

How to install


1. Mount a cartridge onto the headshell using the cartridge installation slotted screw and plastic washer provided, and tighten lightly so that cartridge position can be adjusted.
 - Take care that the screws are short enough so as not to touch and damage the record.
 - When using a cartridge without threaded inserts, use screws and nuts to install the cartridge.
 - Read the user manual of the cartridge.

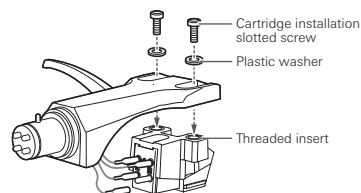

2. Slide the lead tips over the cartridge connections.
 - Do not apply heat.
 - Use tweezers, small pliers, and non-magnetic screwdriver(s) to mount the headshell/cartridge.
 - If a lead tip is loose, flatten it out slightly to attach it.


Layout of headshell leads

Front view

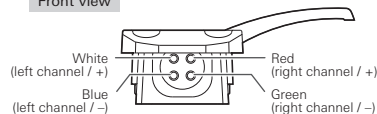


3. Loosen screws with a non-magnetic screwdriver and adjust for overhang. Tighten the screws firmly when position is fixed.

Overhang adjustment

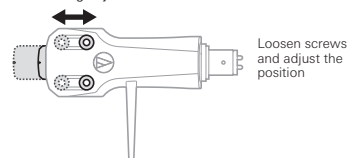

If you are unsure about the overhang adjustment, align the stylus tip with the stylus on the cartridge that originally came with the turntable (see figure below).

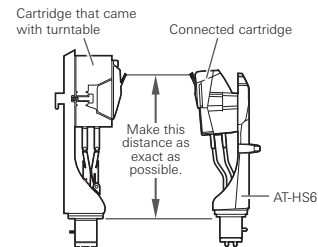

4. Attach the headshell to the tonearm.

5. Refer to the turntable's user manual and adjust the tonearm balance, tracking force and anti-skate.

Audio-Technica Corporation
 2-46-1 Nishi-naruse, Machida, Tokyo 194-8666, Japan
www.audio-technica.com
 ©2018 Audio-Technica Corporation
 Global Support Contact: www.at-globalsupport.com